





Gate Crafters Patriot DIY Package Guide

Pull To Open

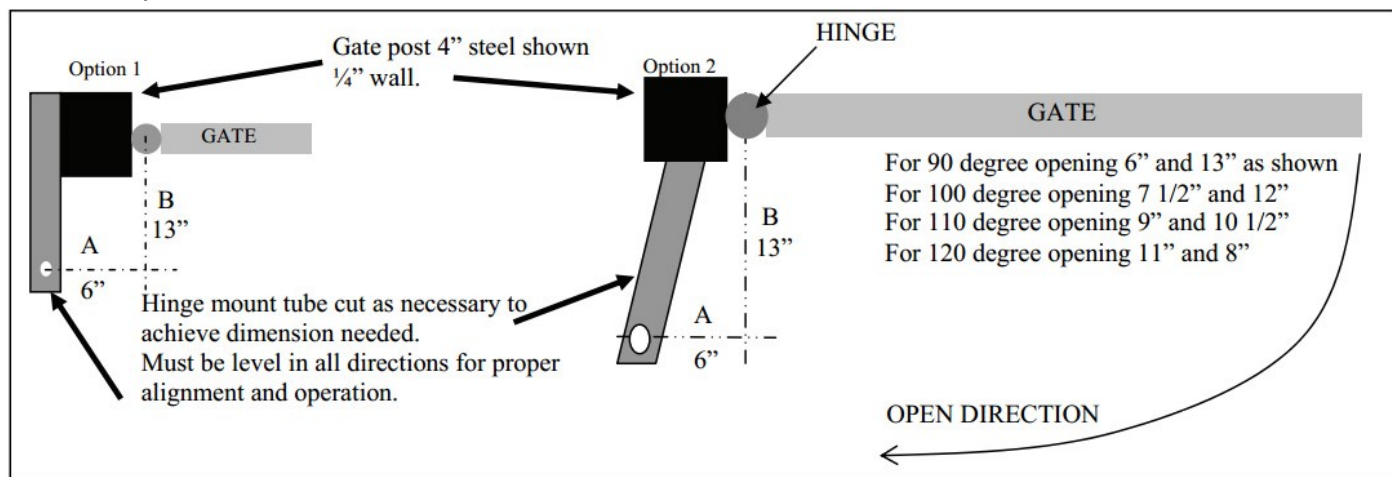

Push To Open

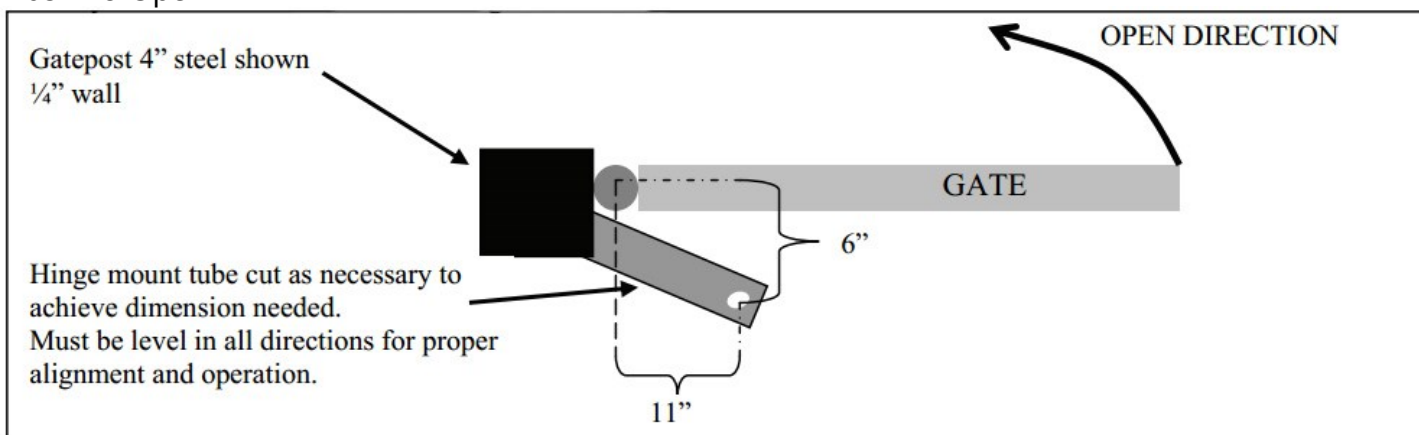

Patriot Post Mount Instructions

1. When taking measurements for the set back. It is important to measure from the center of the gate hinge, to the center of the hole in the mounting bracket, as accurately as possible. (Note: the placement of the set back has a great influence on whether your gate opens properly or not.)
2. By simply clamping the hinge in place. You may see how the gate will line up, open, or close; and make adjustments accordingly. Keep in mind that you need clearance for the opener, as to avoid hitting the column.
3. The brackets will not pivot or move. So if you succeed in attaining the proper setback and clearance, then bracket position will be negligible.
4. To set the position, start by holding the bottom bracket against the column. Mark the horizontal position by drawing a vertical line up from the middle of the bracket. Also mark the position of the angle bracket while the hole is in the setback position.

5. Using the hacksaw, cut off the unneeded length of the tubing.



6. Place the angle bracket in between the two brackets, and clamp together. Then using the pre-drilled holes; drill straight through both brackets and tubing using a 3/8" drill bit, as in the position of the set back.



7. In a position behind the first hole; drill a 5/16" hole straight through all three again. This hole helps to secure the position.

8. Insert a 3/8" bolt, and a 5/16" bolt into the holes.

9. Secure them with nuts and washers.

