Estate Swing Control Board Lightning Surge Protector

Wiring Instructions:

1. Insert both input and output positive wires into the positive terminal
    a. Be sure to have at least 3 feet of wire between the surge protector and the control board you are protecting
2. Insert both input and output negative wires into the negative terminal
    a. Be sure to have at least 3 feet of wire between the surge protector and the control board you are protecting
3. Insert the grounding wire and attach it to a grounding device
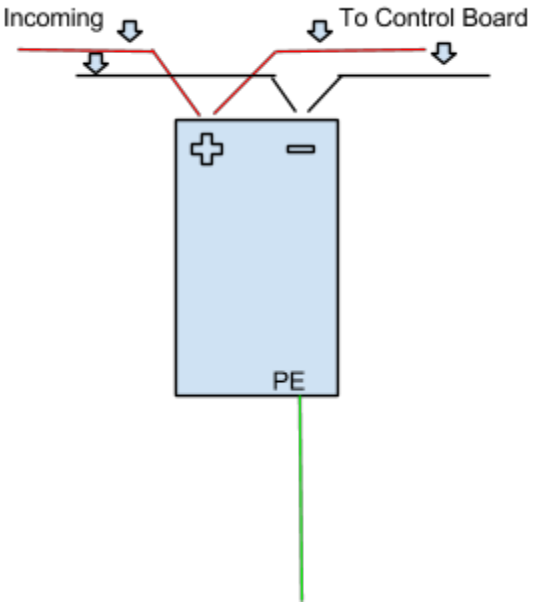
When the indicator window the modular fuse is red, it is time to replace that fuse.